


- Open music player
- Open email software
- Turn off speaker sound
- Left mouse click

- Open [Search]
- Open [My Computer]
- Open default browser
- Right mouse click

- Turn up volume
- Turn down volume
- Previous song
- Next song
- Play / pause

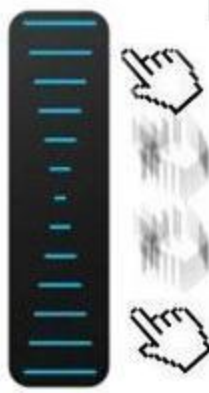

Slide finger to go up and down a page, equivalent to the scroller on a mouse



- Adjust mouse sensitivity
- [Task Manager] shortcut
- [Print Screen] shortcut
- Turn off / on touchpad
- Maximize current page
- Open development tools
- Jump to start of a text
- Jump to end of a text

- Left mouse click
- Right mouse click
- [Start / Menu] bar

*Used during factory reset process. See product description for more details